




InstaShow™ S
Quick Start Guide
WDC20



V 1.00
P/N: 4JJKJ01.001


InstaShow™ S Buttons	InstaShow™ S Host & Lid	4 Antennas	Cradle
Adapter & Plugs	Extender Power Cable	Cable: HDMI A(M) to A(M)	Cable: USB A(F) to USB A(M)
Screws & Rubber Foot	Velcro Strap	Quick Start Guide	Safety Statement

I

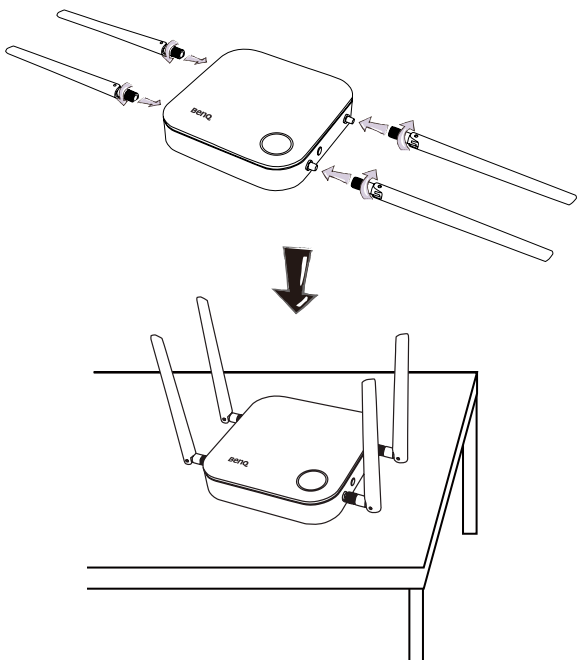


2


A

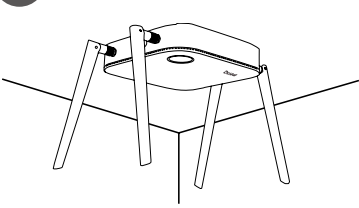


C

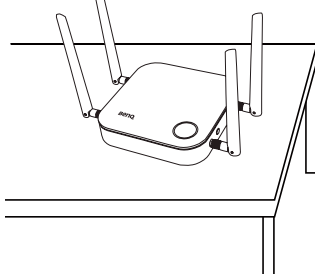


B

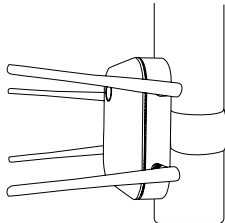


D

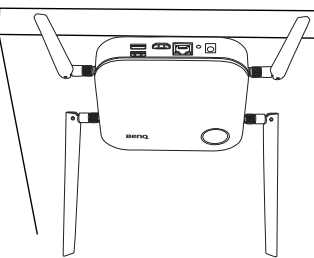


2-A

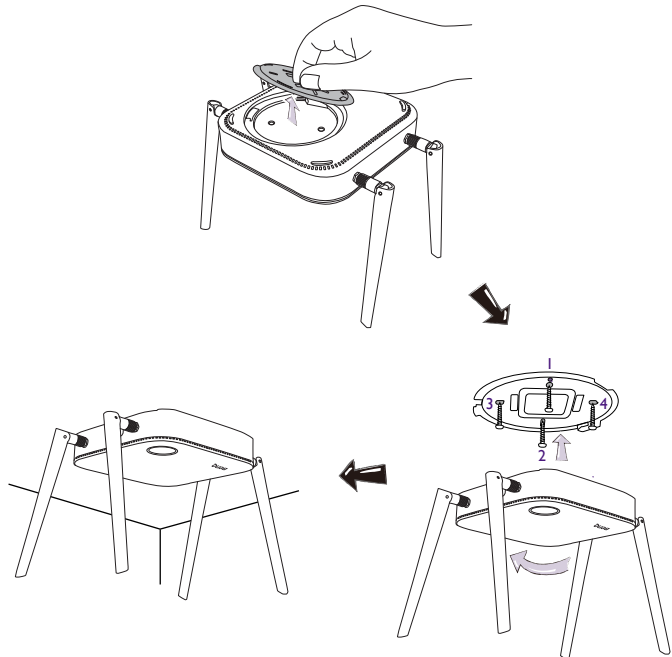

2-B

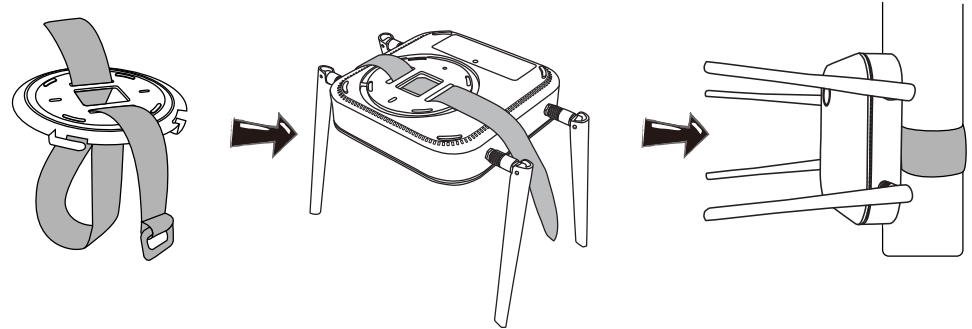

2-C

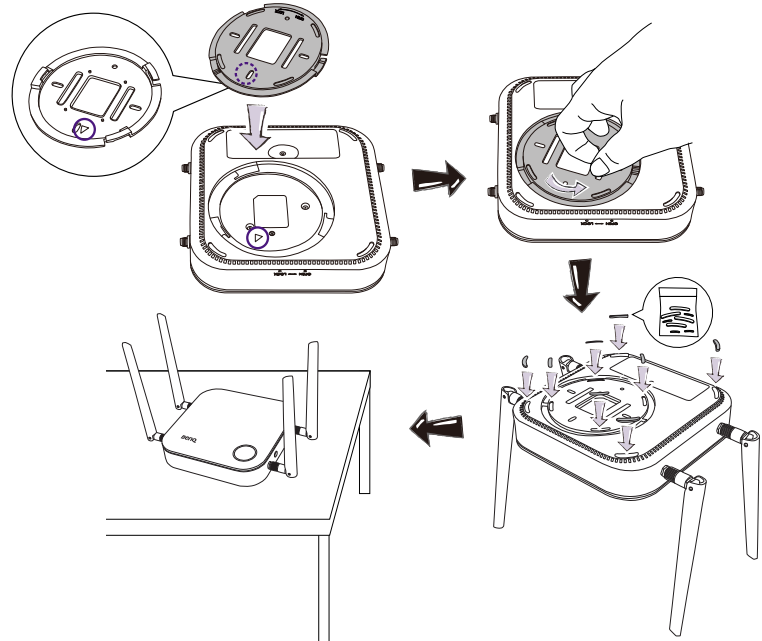

2-D

