





License Types

Core License



Hybrid License

Renewal Types

Core
License
EDU-Renewal

HybridLicense

— Renewal —

SKU

Description

When to Use

AT-CORE-1Y

Standard license for all
Airtame hardware and Virtual
Airtame-capable hardware.

For new, unlicensed devices. Automatically included with AT-DG2, AT-DG2-3Y and AT-CD1-CORE-3Y.

AT-CORE-EDU-1Y

Discounted license for educational institutions.

For schools (primary, secondary, K12, higher education). Cannot be used for non-education accounts.

AT-HYBRID-1Y

Grants access to all Airtame features, including screen sharing, digital signage, and video conferencing.

For new, unlicensed devices. Automatically included with AT-CD1-HYBRID-1Y.

AT-CORE-1Y-RENEWAL

Core

License

Renewal

Adds 1 year of credit to renew Airtame Core license.

For renewing existing Airtame Core licenses.

AT-CORE-EDU-1Y-RENEWAL

Adds 1 year of credit to renew an Airtame Core for Education license.

For renewing existing Airtame
Core for Education licenses.

AT-HYBRID-1Y-RENEWAL

Adds 1 year of credit to renew an Airtame Hybrid license.

For renewing existing Airtame Hybrid licenses.

Important Ordering Information

- **Delivery Email:** Always include a delivery email in the Purchase Order (PO). This is where the license key will be sent.
- **Education SKUs:** Use AT-CORE-EDU-1Y and AT-CORE-EDU-1Y-RENEWAL only for education accounts. These SKUs will not work for non-education accounts.
- **Renewal Orders:** Ensure renewal orders use the correct renewal SKU. Incorrect SKUs will result in unsuccessful renewals and loss of functionality.
- **Renewing Multiple Years:** To renew for multiple years, order the corresponding number of 1-year renewal SKUs. For example, to renew 7 devices for 2 years, order 14x AT-CORE-1Y-RENEWAL.

How Airtame Licenses Work

- 1 License = 1 Airtame Device: Each license is tied to one Airtame device.
- **License Activation:** Ordered licenses are delivered as license keys, which must be entered in the Airtame Cloud account.
- **Hardware Includes Licenses:** Airtame hardware automatically includes a license upon first setup in the Airtame Cloud account.
- **Virtual Airtame:** Always requires a license for the Virtual Airtame software to work.

Further information

For further assistance or questions, contact



Phillip Hornehøj

Global Manager, Sales Operations & Enablement

∠ +45 89 87 72 89✓ phillip@airtame.com

This guide is intended to provide a clear and quick reference for understanding Airtame licenses and their appropriate use.