



InstaShare™ Button User Manual

Copyright

Copyright © 2026 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes.

This user manual aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit www.benq.com for the latest version of this manual.

The illustrations and the images in this guide are for your reference.

Table of contents

Copyright.....	2
Disclaimer	2
Introduction	4
Package contents.....	4
Product specifications	5
Overview	6
Button	6
LED indicator for the Button	6
Storing Buttons in the InstaShare Dock (purchased separately).....	6
Using InstaShare Button Solution	7
Download InstaShare Button App for quick connection & BYOM mode	7
Connecting the wireless adapter	7
Enabling InstaShare Button mode	7
Pairing your InstaShare Button	8
Sharing your screen	10
Bring your own meeting (BYOM): Using the webcam, speakers and microphone of your BenQ Board	12
Updating InstaShare Button firmware through BenQ Board	13
Split-screen presentations	14
Touch back	16
Upgrading InstaShare Button firmware on Windows device	17

Introduction

InstaShare Button Solution is a wireless screen sharing solution that allows users to display their notebooks or other personal devices to a presentation display without needing to install software or drivers.




Your product complies with local wireless regulations and the warranties are valid in the country/region where the product is purchased. Using the product outside the purchased country/region does not guarantee wireless functionality. Any modifications made to the product will void the warranties.



- Check which displays are compatible with InstaShare Button: Go to www.benq.com > search "TWY31"(model name) > check out the **Specifications** tab on the product page.
- Touch back is available on Windows & Mac.
- Transmission distance depends on many environmental factors. Stated transmission distance is based on direct line-of-sight.
- According to regulatory restrictions in different regions of the world, Wi-Fi channels cannot be used in countries outside the purchased region.

Package contents

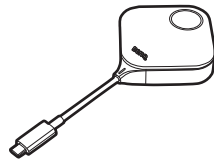

InstaShare Buttons



Type-C to Type-A USB Adapters



Quick Start Guide



Regulatory Statements




- Available accessories and the pictures shown here may differ from the actual contents and the product supplied for your region.
- Use original accessories to ensure compatibility.
- Always keep the product and accessories out of reach of children.

Product specifications

InstaShare Button (TWY31)	
Color	Silver
Wireless transmission frame rate (Casting mode)	Up to 60 FPS depending on environment (1080P 60FPS/4K 30FPS)
Wireless transmission frame rate (BYOM mode)	Up to 1080P 30 FPS depending on environment
Button input resolution (Casting mode)	Up to 4K 30 FPS
Button input resolution (BYOM mode)	Up to 720P 30 FPS
Audio rate	Stereo, Radio quality 16bits 48KHz
Wi-Fi standard	IEEE 802.11ac 5GHz, 2T2R MIMO
Authentication protocol	WiFi Standard
Wireless security (encryption)	WPA2 Personal (WPA2-PSK)
Wireless range	Max. 15m (between Button and IFP)
Temperature range	Operating: 0°C to +40°C (+32°F to +104°F)
	Storage: -10°C to +60°C (+14°F to +140°F)
Humidity range	Operating: 10% to 80% relative humidity
	Storage: 5% to 90% relative humidity (non-condensing)
Cable	USB Type-C
Power supply	DC 5V±10%, Minimum 0.9A
Power consumption	Max 4.5W Full Loading
Dimensions (WxHxD)	67mm x 67mm x 23.2mm

Overview

Button

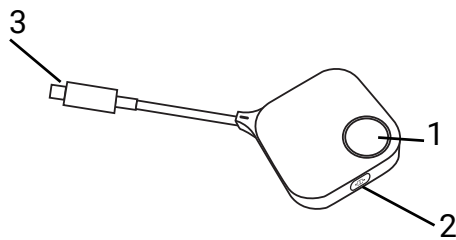

1. **Present key with LED indicator**
Press to start or stop presenting.
2. **Full-screen key**
Press to toggle between enlarged view or regular view during split-screen presentations.
3. **USB Type-C connector**
Connect to a computer or laptop.


LED indicator for the Button

Please refer to the table below for detailed indicator and status descriptions for the Button.

LED Behavior	Status description
Solid white	The Button is initializing.
Blinking green	The Button is connecting to the BenQ Board.
Solid green	• When pairing: The Button is ready for setup. • When sharing: The Button is ready for sharing.
Solid blue	• When pairing: The Button setup is complete. • When sharing: The Button is sharing your screen.
Blinking red	An error has occurred. Ensure the following: • The InstaShare Button mode is enabled on the board. • The Button is correctly paired with your board. • The Button is within 15m (49ft) of the board.

Storing Buttons in the InstaShare Dock (purchased separately)

You can store up to four Buttons in the InstaShare Dock along with additional accessories such as styluses and remote control.

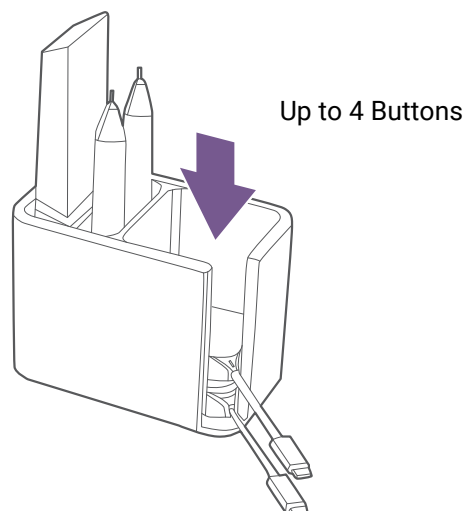


Using InstaShare Button Solution

To share content to your BenQ Board from any laptop with InstaShare Button, follow the instructions below:

Download InstaShare Button App for quick connection & BYOM mode

Connecting the wireless adapter

To begin using InstaShare Button, you must first install the wireless adapter to a Wi-Fi slot USB port on your display. It is recommended that you use a USB-A 3.0 port.

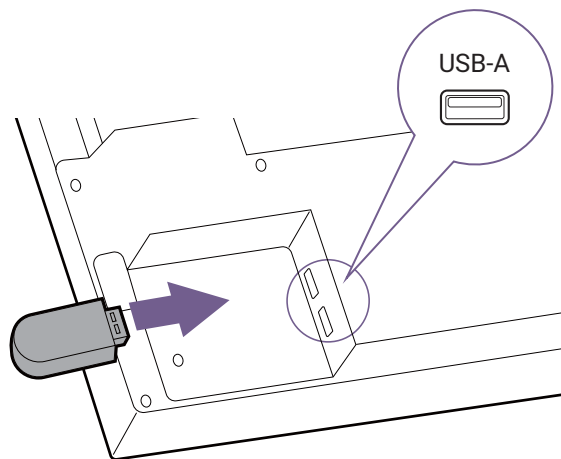

The position of Wi-Fi slot USB port varies by model. Visit [Support.BenQ.com](https://support.benq.com) to access the user manual under your BenQ Board model for instructions.

Enabling InstaShare Button mode




Depending on the display model or firmware version, Button Mode may already be enabled by default.

1. On the BenQ Board, tap  > **BenQ App Store**.
2. Download and install the **InstaShare Button** app.




3. Tap  > **Device** > **Advanced Settings**.
4. Enable **InstaShare Button** mode.

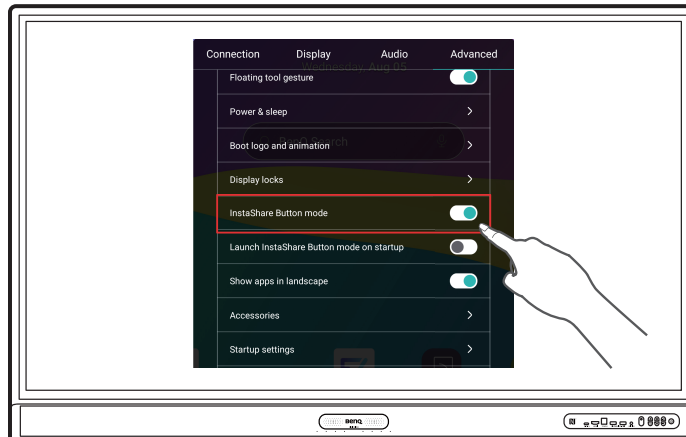


5. Tap **Restart**.

Pairing your InstaShare Button


1. On the BenQ Board, tap  > **InstaShare Button**.

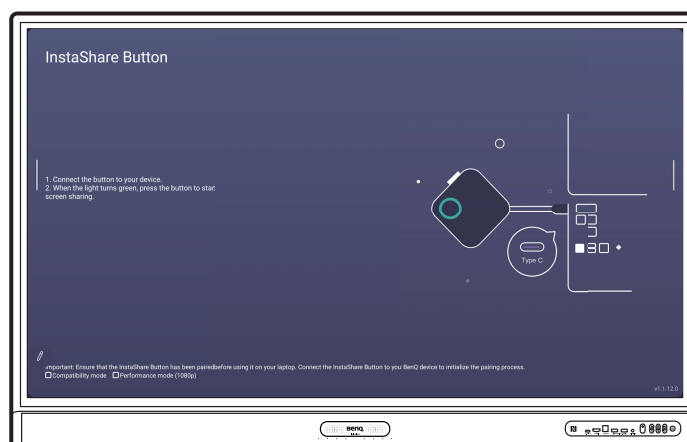

2. Connect the InstaShare Button to your BenQ Board's front USB-C port.

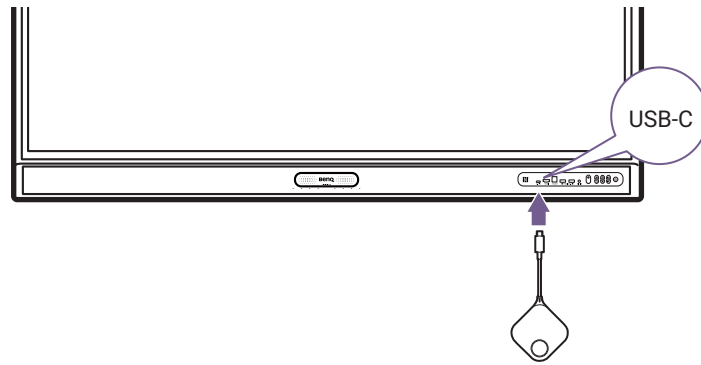

If a new firmware version is available, you will receive a notification. Follow the steps on screen to update the firmware.

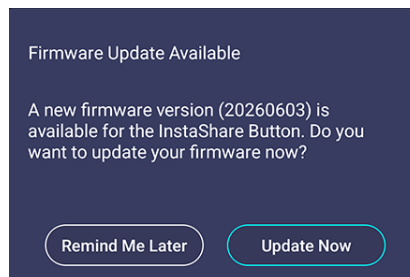


3. Wait for the dialog box to appear then tap **OK**.



4. Enter a Button name then tap **OK** > **Close**.



5. Remove the Button after successful setup.

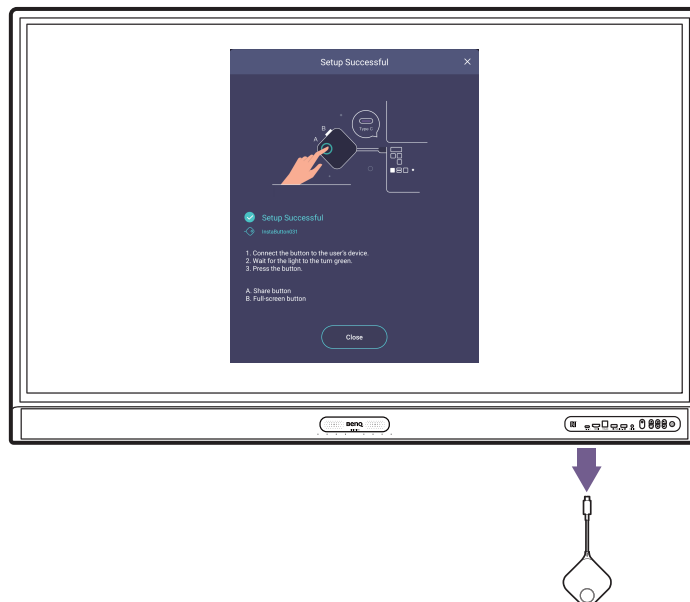

6. Repeat the process for additional Buttons. The board can remember up to nine Buttons for easy connection.


Sharing your screen




Ensure that your laptop supports video output and power delivery via USB Type-C port (Display Port Alternate Mode on USB Type-C).

1. On the BenQ Board, tap  > **InstaShare Button**.


2. Connect the InstaShare Button to your device's USB-C port.

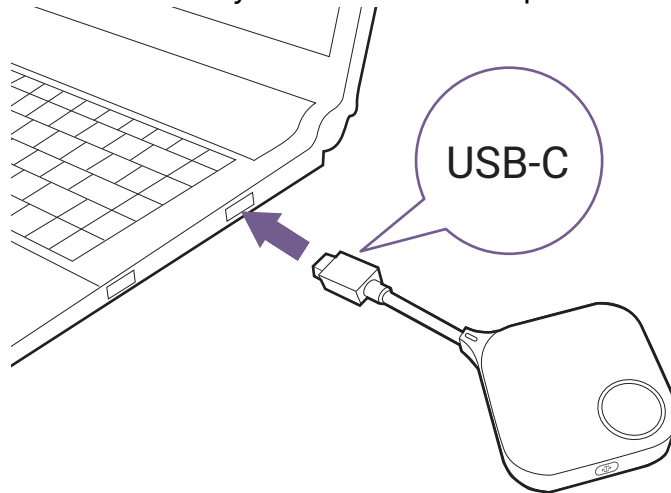

3. Wait for the LED to turn solid green then press the present key.

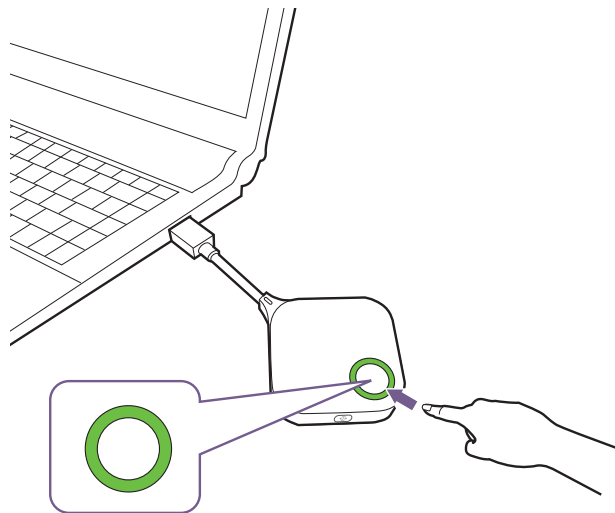


4. The LED turns blue, and your laptop screen is shared on the BenQ Board.

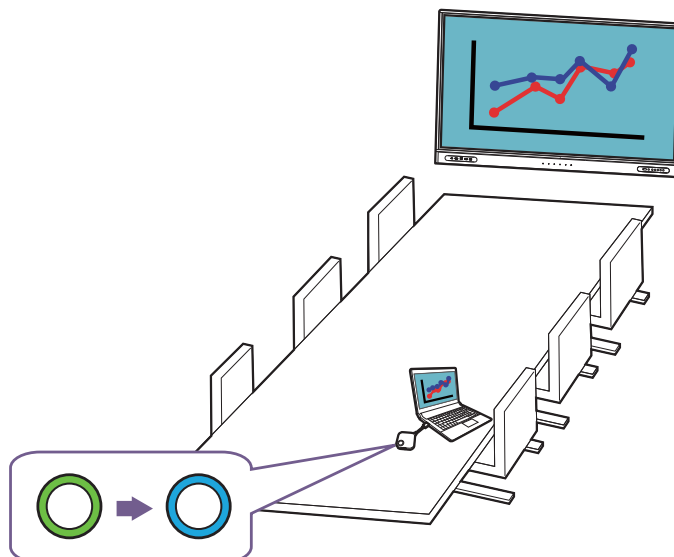

Press  on the side of the InstaShare Button to toggle between the full-screen and split-screen modes.

Bring your own meeting (BYOM): Using the webcam, speakers and microphone of your BenQ Board


When a Button is connected to a device and presenting, the device will also be able to make use of any combination of the display's speakers, microphone, or webcam (connected externally). Users can switch between the audio/video channels of either their device or BenQ Board based on what is suitable for their setting.

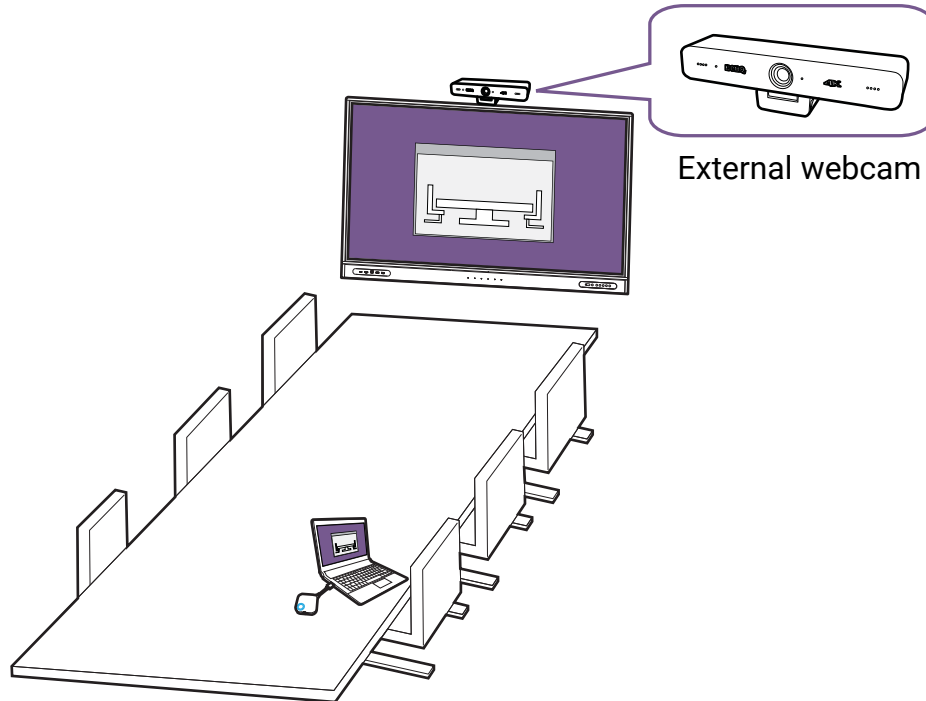


Updating InstaShare Button firmware through BenQ Board

If a new firmware version is available, you will receive a notification when you connect the button to your BenQ Board.

1. On the BenQ Board, tap  > **InstaShare Button**.
2. Connect the InstaShare Button to your BenQ Board's front USB-C port.
3. Tap **Update Now**. The BenQ Board installs the update then displays a confirmation message.

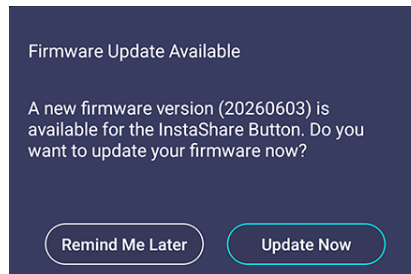

4. Tap **Close**.

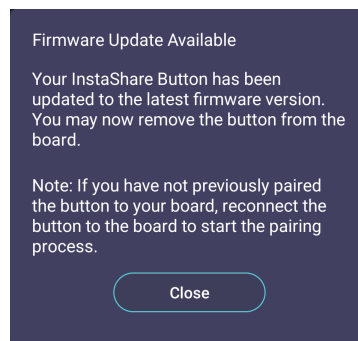

You can also run the firmware upgrade tool on a Windows device. See [Upgrading InstaShare Button firmware on Windows device on page 17](#) for details.

Split-screen presentations


The product allows up to nine users to present simultaneously in a split-screen mode. (*Availability varies by model.)

Sharing multiple screens



Ensure that all Buttons have already been paired to the wireless adapter connected to the display. See [Pairing your InstaShare Button on page 8](#) for more information.

1. Launch the **InstaShare Button** app on the display.
2. Press the present key on the Button to start sharing your screen.

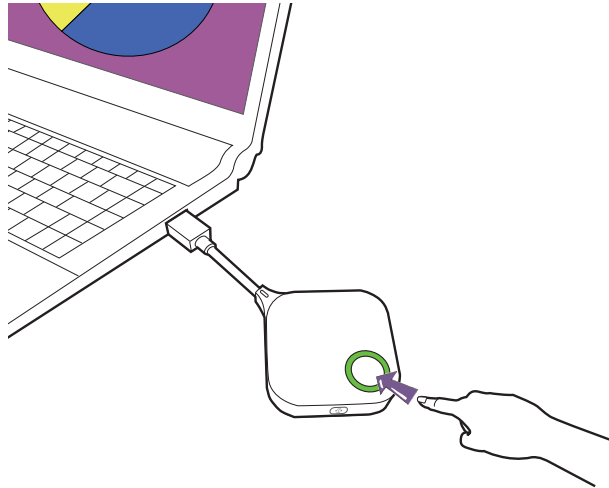

3. Repeat step 1 for addition screens to be shared. **InstaShare Button** will automatically switch to split-screen mode.



The layout of the split-screen presentation will be dictated by the amount of users in the presentation.

Maximize one window in split-screen mode

Users can maximize their screen by pressing the full-screen key on the Button.



To return to the split-screen presentation, press the full-screen key again.

Touch back

To use touchback, simply tap on the BenQ smart display to control the connected PC.



Touchback is only available on Mac & Windows PCs and is not supported during multi-screen sharing.


Upgrading InstaShare Button firmware on Windows device

Users may contact BenQ support to get the latest firmware upgrade tool and firmware package.


1. Run the firmware upgrade tool (TWY31 V1 UpdateTool-1.3.919-signed.exe) on a Windows device.
2. Insert the Button into the laptop's USB Type-C port. A message with the button's current firmware version will appear.



3. Select the firmware package (do not unzip) and click **Start upgrading**.

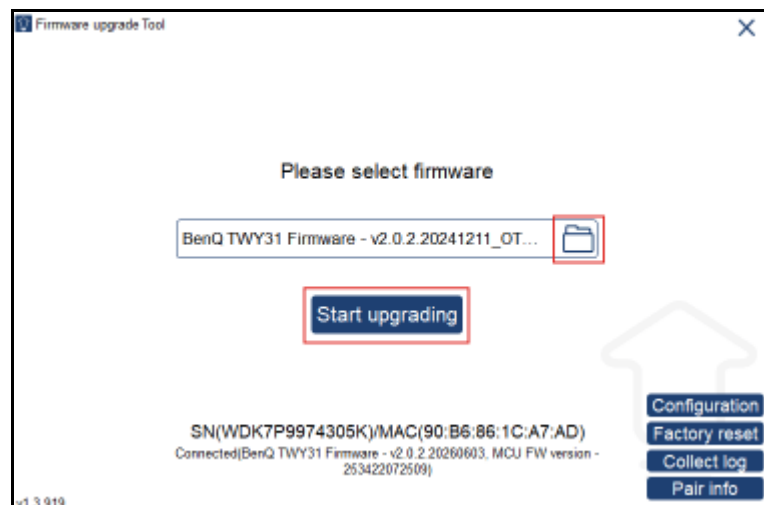

4. A window will appear stating that the firmware has successfully updated and will not restart.

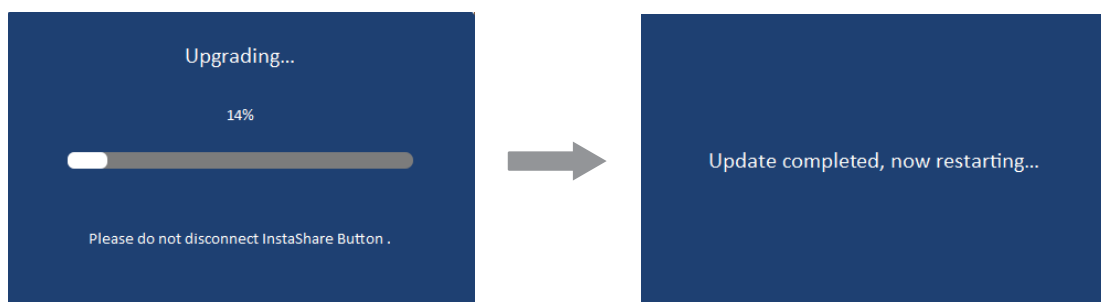

5. Remove and re-connect the Button to your laptop to verify the updated firmware version.